



ADJUSTABLE BED WITH MASSAGE UNIT USER MANUAL

SAFETY INSTRUCTIONS

1. People with heart pacemakers must not use the massage unit, as the unit may possibly affect the pacemaker.
2. Never open the housing of the controls and motors - doing so will void your warranty.
3. Check that the cables and housings are not damaged, if this is the case do not use the adjustable unit and contact your dealer.
4. Any repairs must be approved prior to works being undertaken otherwise you could void your warranty.
5. When the mechanism are in use please do not sit directly on or apply pressure to any raised section of the bed base. Your adjustable bed base must always be returned to the horizontal position before getting into or out of the bed.
6. Do not allow liquids to get into controls or motors.
7. Do not look directly into the torch and the LED light.
8. The massage unit is designed for use in enclosed dry living areas.
9. Please ensure that children do not play with the remote control - keep the remote control out of reach of children.

REMOVING PACKAGING / FITTING THE FINISHINGS

1. Unwrap from packaging / bag and remove fabric straps used to secure drawers.
2. Remove the orange straps used to secure the slatted frame during transit.
3. Insert each of the supplied castors into the holes of the underside of your adjustable base(s). Tap in gently with a rubber mallet if required.
4. Attach headboard (if ordered) using the supplied headboard bolts. Find the feral by running your hand over the head end, which is under the material. Using the headboard bolt gently pierce the fabric and make a few turns into the feral then remove. Place the headboard in place and then screw in the headboard bolts tightly enough

5. to hold the headboard securely in place.
6. Attach the mattress support bar to the foot-end of the bed by sliding onto the final slat nearest to the foot-end (see image above).
6. If you have purchased a double, king or super king, affix the linking bars to each of the bed bases using the supplied butterfly bolts (2 x bolts per linking bar) to ensure that your bases do not separate. Please note that you may need to pierce the fabric of the bed base once you have determined the fixing points for the butterfly bolts.

Pack contents (Single Base):

- 6 x castors
- 4 x headboard bolts (if ordered)
- 1 x mattress support bar



Metal chrome castor



Headboard bolt



Mattress support bar

Pack contents (Two Bases):

- 12 x castors
- 4 x headboard bolts (if ordered)
- 2 x Linking Bar
- 4 x Butterfly bolts
- 1 x mattress support bar



Butterfly Bolts



Linking Bar

With the remote control, you can easily operate the following functions:


1. Set the required massage strength.
2. Start one of the three different wave massage programmes.
3. Set the intensity of the wave massage programmes.
4. Operate the bed adjustment motor.
5. Switch on and off the infra red receiver's night light.
6. Switch on and off the torch LED of the remote control.

INITIAL SET UP

Before you can use the bed the handset must be paired to the control unit on the bed. This only needs to be performed once.

1. Remove the battery cover on the handset and insert the batteries, making sure they are inserted the correct way. Do not replace the battery cover yet.
2. Plug the mains plug into a socket and switch on, wait for the light on the control box to go out.
3. Press the pairing button (a) on the control box twice, this button will illuminate.
4. Within 10 seconds off the LED illuminating press and hold the pairing button inside the battery compartment of the handset (P), you will need a paper clip or tip of a pen to reach this button. The pairing button on the control box will flash blue, when it stops flashing the pairing is complete.
5. Replace the battery cover.

PLEASE NOTE: Only commission one system at a time. Never attempt to configure multiple systems simultaneously. Do not touch the buttons of the handset while the unit is being commissioned.

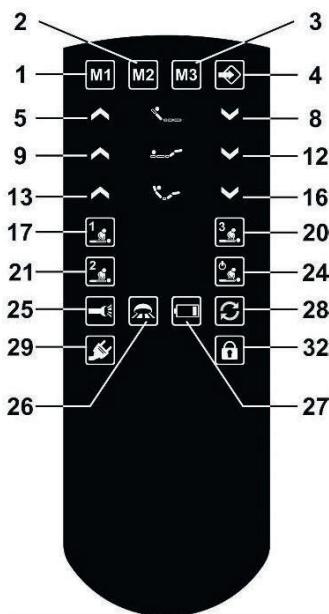

BUTTON	FUNCTION
1	Memory Position 1
2	Memory Position 2
3	Memory Position 3
4	Save Memory Position
5	Back Adjustment Up
6	Foot Adjustment Up
7	Back and Foot Adjustment Up
8	Down arrow
9	Foot Adjustment Down
10	Back and Foot Adjustment Down
11	Up arrow
12	Back Adjustment Down
13	Foot Adjustment Down
14	Back and Foot Adjustment Up
15	Massage Mode 1
16	Massage Mode 2
17	Massage Mode 3
18	Massage Off
19	Torch On/Off
20	Floor Lighting On/Off
21	Battery Indicator
22	No function
23	No function
24	Child Lock Mechanism On/Off

BASIC FUNCTIONS

With the remote control, you can easily operate the following functions:



Drive(s) up: The drive(s) move and the button is lit blue as long as this button is pressed.



Drive(s) down: The drive(s) move and the button is lit blue as long as this button is pressed.



Turn the flashlight on/off: The torch is on and the button is lit blue while this button is pressed.



Battery indicator: This button will light red whenever the remote control is enabled and the battery voltage drops below 3.5V. The batteries must then be replaced.



Floor lighting on/off: Switch the floor lighting on/off. The button is lit blue when the floor lighting is on. The floor lighting turns off automatically after 30 minutes.



Child Lock mechanism on/off: While the child lock is activated the bed adjustment will not function.
Activating/Deactivating the child lock: To toggle the child lock feature on and off, press this button for about 5 seconds, the back light on the handset blinks twice. The control box will make an audible signal and the light flashes. When child lock is activated the button is lit blue and the control box will flash when an adjustment key is pressed. The 'deactivate child lock' feature does not influence the functionality of the torch, floor lighting, message modes 1-2-3 or message off.

MASSAGE FUNCTIONS

To start the massage, select one of the massage programs.



Massage mode 1: Stationary intensity; the massage motors run at continual speed.



Massage mode 2: Pulsing massage; the massage motors change their speed at the same time.



Massage mode 3: Wave massage; the massage motors change their speed at offset times.



Massage mode off: This button is lit blue as long as the button is pressed. The "Massage mode off" button also functions while the child lock is enabled.

MEMORY FUNCTIONS

It is possible to store up to three of your favourite positions, for example for reading, watching TV and sleeping.



Save Memory Position: Adjust the bed to the position you wish to save. Press the Save Memory Position button, the "Memory Position 1-2-3" buttons light up. Then press the desired position button within two seconds. The control box will flash and make an audible signal. The position is saved in memory.



Memory Position 1: The bed will adjust to the stored memory position and the button is lit blue while this button is pressed.



Memory Position 2: The bed will adjust to the stored memory position and the button is lit blue while this button is pressed.



Memory Position 3: The bed will adjust to the stored memory position and the button is lit blue while this button is pressed.

- The massage modes always start at level 1.
- Level 1 is the lowest level.
- Level 4 is the highest level.
- Level 0 means the massage is deactivated. The button is not illuminated.
- The activated button will be lit blue. The button lights up blue for the levels 1-2-3-4-3-2-1.
- Each time the "Massage mode" button is pressed, the intensity increases or decreases according to the next level.
- When level 4 has been reached, a press of the button will cause the backlit illumination to blink "white" once.
- The levels are in the following sequence: 0-1-2-3-4-3-2-1-0. The sequence repeats after level 0.
- When switching massage modes or after the "Massage mode off" button has been pressed, the activated massage mode ends and the corresponding blue illumination switches off.
- The massage mode will end after about 15 minutes. The blue button illumination goes out when you press any button.
- If the intensity is changed in this time, the massage duration (about 15 minutes) does not change.
- If the massage mode is changed in this time, the massage duration [about 15 minutes] starts over.
- An activated massage mode is not interrupted when the drives are moved

USING A SMARTPHONE OR TABLET

It is possible to operate the adjustment, memory and massage functions of the bed using an Andriod or iOS device (Apple iPhone or iPad) with the Okin App available from Google Play Store or Apple App store.

SET UP

1. Search for and install "OKIN smart remote" in the Play Store or AppStore
2. Make sure Bluetooth is enabled on your device and open the "OKIN smart remote" app
3. When the app has opened and adjustment icons are displayed swipe the screen from right to left and enter the settings menu by pressing the cog symbol.



4. Select "Select Device", then select one of the devices, usually listed as "OKIN-Receiver". You will then return to the screen with the adjustment icons.
5. Again, swipe from right to left and enter the settings menu by pressing the cog symbol.
6. Select "General Settings", then "select interface by item number", enter the code "83126" and press "OK". Exit the menu by pressing the back arrow at the top of the screen.


SUGGESTION: In the settings menu under "Device Settings and Information" it is possible to change the device name, by selecting "Rename Device", from "OKIN-Receiver" to something that is distinguishable, e.g. "MyTempurBed". This is especially useful if you have a king size or a super king size bed where both sides of the bed can be adjusted independently.

APP FUNCTIONS - BED ADJUSTMENT

There are two screens, to switch between them swipe left/right.

APP FUNCTIONS - BED ADJUSTMENT

There are two screens, to switch between them swipe left/right.

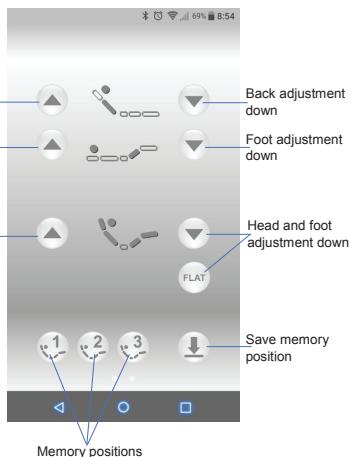


The bed adjustment buttons will only work while they are pressed, once released the adjustment will stop.

To store a memory position, press the "save memory position" button and within two seconds select the "memory positions" button you wish to store it as. To recall a memory position press and hold the "memory position" button, the adjustment will stop once the position is reached.

APP FUNCTIONS - MASSAGE

There are two screens, to switch between them swipe left/right.

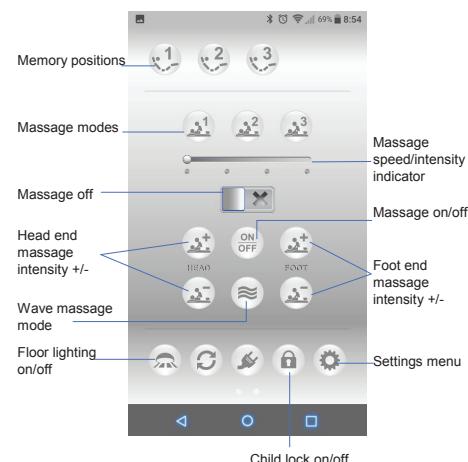

Pressing and holding the memory position buttons will adjust the bed to the stored positions. The adjustment will stop once the position is reached or the button is released.

Massage modes 1, 2, 3 work in the same way as the on the handset. The massage speed/intensity indicator will show which intensity and speed the system is at.

Press the "massage on/off" button to start both head and foot end massage motors. They will remain at a constant intensity. It is possible to increase and decrease the intensity of the massage motors independently by using the head and foot end massage intensity +/- buttons. Pressing the "massage on/off" button again will stop the massage.

By pressing the "Wave massage mode" button the wave program will start on the slowest setting, pressing the "Wave massage mode" button again will increase the speed (but not the intensity) up to three times before returning to the slowest speed. The intensity is controlled by the head and foot end massage intensity buttons. The floor lighting button and the child lock on/off work in the same way as on the handset.